# SteelHead Interceptor シリーズ バックアップ&リストア ガイド

Ver.1.1 2023/10/11

> 丸紅情報システムズ 技術本部 セキュリティサービス技術部

# 目次

1	バックアップ手順	3
1.1	設定ファイルのバックアップ	3
2	リストア手順	4
2.1	ライセンス適用	4
2.2	設定ファイルのリストア	5
2.3	時刻同期	6
2.4	機能の正常性確認	7
3	ソフトウェアのバージョンアップ	8
4	ハードウェア・ソフトウェア サポート終了ポリシー	13

#### はじめに

本書は Interceptor シリーズの保守サービスをご提供するにあたり、機器の復旧に必要な作業をまとめた資料となります。 現状復旧を目的としました機器交換の保守サービスでは、機器の情報として以下の情報が事前に必要となります。万が一交換時に ご準備いただいていない場合、現状復旧作業を進めることはできません。機器交換作業前に、予め情報をご準備いただけますようお 願い申し上げます。

### 【保守サービス – 機器交換時の事前準備リスト・注意事項】

- □ 復旧対象機器の 【ソフトウェアバージョン情報】
- □ 復旧対象機器に適応されているソフトウェアバージョンの設定ファイル
- □ 復旧対象機器の 【ログイン ID / パスワード】
- □ Riverbed アプライアンスの管理画面にログインできる 『端末』 『ネットワーク環境』

#### 1 バックアップ手順

障害復旧の際には設定ファイルが必要となります。 下記手順に従い、バックアップを行ってください。

#### 1.1 設定ファイルのバックアップ

コンフィグをコピーし、機器交換時に投入します。

- ブラウザから Interceptor アプライアンスの管理画面を開き、ログインしてください。
   ・アクセス先 HTTP or HTTPS:// Interceptor の IP アドレス
   ・ユーザ名:お客様管理 パスワード:お客様管理
- ② Configure > Configurations ページを開きます。
- ③ 「View Running Config」からコンフィグをテキストなどにコピーします。

ome Configure • Reports • S Configurations	upport 🗐 Save 🖒 Restart 🌢 Healthy	<ul> <li>Riverbed — Mozilla Firefox</li> <li>RiverbedMozilla Firefox</li> <li>n130-ic1.lab.local/mgmt/popup?p=cfg</li> </ul>	- □ E ☆	× ≡
Configure > Configuration: initial View Running Config Save Revert Save Current Configuration New Configuration Name:	tions 2	Running Configuration ## ## Network interface configuration ## interface aux description "" no interface aux dhcp no interface aux dhcp dynamic-dns interface aux ip address 10.99.130.31 /16 interface aux ip address 10.99.130.31 /16 interface aux stutodwn interface aux speed "auto" interface aux speed "auto" interface aux speed "auto"		
Configuration 14	Date †	no interface inpath@@ dhcp dynamic-dns interface inpath@@ ip address 10.1.130.31 /24		
initial (active)	2023/06/14 21:50:18	interface inpath0_0 mtu "1500"		
initial.bak	2023/06/14 21:50:15	interface inpath@_0 speed "auto"		
-Change Active Configuration	bed Technology, Inc. All rights reserved. 0.666: 7.428:573: 7.318.100;	<pre>## ## Routing configuration ## ip default-gateway "10.1.130.1" ip in-path fwm-route interface inpathe_0 target-addr "0.0.0.0" ip in-path route inpath0_0 10.1.31.0 255.255.255.0 10.1.130.101 ip in-path-gateway inpath0_0 "10.1.130.1"</pre>		

## 2 <u>リストア手順</u>

リストアを実施する際は、下記手順に従い実施してください。

#### 2.1 ライセンス適用

機器本体ヘライセンスを適用します。

- ブラウザから Interceptor アプライアンスの管理画面を開き、ログインしてください。
   ・アクセス先 HTTP or HTTPS://SteelHead の IP アドレス
   ・ユーザ名:お客様管理 パスワード:お客様管理
- ② Licenses ページを開きます。
- ③ 「Add a New License」をクリックします。
- ④ ライセンスキーを張り付け、「Add」をクリックします。
- ⑤ ライセンスエラー画面が表示されていないことを確認します。 反映まで数分程度かかりますので、適宜画面を更新します。

#### 2.2 設定ファイルのリストア

設定ファイルを交換機に投入します。 ※交換機が同じモデルで同じソフトウェアバージョンの場合

- ① Configure > Configurations ページを開きます。
- ② 「Import a New Configuration」をクリックします。
- ③ 項番 1.1 でコピーしたコンフィグを貼り付け、インポートします。

#### 2.3 時刻同期

- ① 作業端末の IP アドレスをリストア後 SteelHead の IP アドレスと同じセグメントにし、Primary ポートに接続します。
- Teraterm を起動し SteelHead に SSH 接続します。
   IP アドレス リストア後の IP アドレス
   ユーザ名 お客様管理
   パスワード お客様管理
- ③ 下記のコマンドを実行し、現在の時刻に合わせます。
  - SH > en
  - SH # conf t
  - SH (config) # **no ntp enable**
  - SH (config) # ntpdate <NTP server IP address>
  - SH (config) # **ntp enable**

#### 2.4 機能の正常性確認

- ブラウザから管理画面を開き、Interceptor アプライアンスへログインします。 アクセス先 HTTP or HTTPS://リストア後の IP アドレス ユーザ名:お客様管理 パスワード:お客様管理
- ② Reports > Diagnostics > Alarm Status をクリックします。
- ③ 「Status」に異常(エラー等)がないことを確認します。

#### 3 ソフトウェアのバージョンアップ

※ソフトウェアバージョンアップを実施する前に必ず以下を準備ください。

ソフトウェア バージョンアップのステップを確認(お使いいただいておりますバージョンによっては、目的のバージョンになるまでに数回のバージョンアップを実施する必要がございます。以下サイトにて確認いただけますので、バージョンアップする際、必ずご確認ください。)

https://support.riverbed.com/content/support/software/steelhead/cx-appliance.html

① サポートサイト (https://support.riverbed.com/) にアクセスし、「Log In」をクリックし、ログインします。



② Software & Documentation → [SteelHead]をクリックします。

Riverbed Support: Home - Welco × +			~ – 🗆 X					
$\leftrightarrow$ $\rightarrow$ C $$ support.riverbed.com/content/s	support.html		🕶 🔤 @ 🖻 ★ 🔲 🈩 :					
There is an active	Product St maintenance or incident for one or more of your	atus Update SaaS products. Please visit this product	t status page for more details.					
riverbed support	MY RIVERBED	SOFTWARE & DOCUMENTATION	TOOLS & RESOURCES LICENSES 🗂 😧 GA					
Acceleration >	Digital Experience Management >	Legacy >						
SteelHead	Portal	AppMapper	Packet Analyzer					
SteelFusion	Aternity APM	AppSQL	Report Server					
SteelConnect	Aternity EUEM	AppCapacity	Transaction Analyzer					
App Acceleration	Aternity UJI	ARX	Transaction Analyzer Packet Trace					
Control and Management	Network Performance Management $>$	NetAuditor	Warehouse					
( Alluvio IQ >	Portal	NetCollector	UCExpert					
	AnnResponse	NetPlanner	Riverbed Modeler					
	NetProfiler	NetIM 1.x	nCompass					
	NetIM	NetSensor	NetOne Bundle for Enterprise					
		NetShark	Riverbed AirPCap					
		NetExpress	Riverbed TurboCap					
			WebAnalyzer					
_			Product List (A-Z) >					
SteelCentral/Alluvio Interoperability 3 days ago This knowledge base article lists the Riverbed products compatible with specific SteelCentral product versions: AppRes…								
<ul> <li>SteelHead or Interceptor be</li> <li>This condition has arisen due to a so</li> <li>Slow transfers after upgradi</li> </ul>	comes unreachable until the unit is rel oftware defect in the Secure Remote Logging feat ng to RiOS 9.14 Release 1 month ago	booted 28 days ago ture available since RiOS 9.10. Ri…	What's New in SaaS Accelerator 1.5.2 Accelerator 1.5.2 Accelerator 1.5.2 Accelerator 1.5.2 Accelerator 1.5.2					

③ Interceptor の場合は、以下をクリックします。



 ④ From Version:に現在のバージョン、To Version:にアップデートしたい Software を入力し、「Submit」を、 クリックします。

Find Software	Upgrade:					
Use the upgrade tool	to find recomm	nend	ed upgrade paths bet	ween versions.		
*From Version:	Select	•	*To Version:	Select	•	Submit

⑤ 以下は、v6.0.0からv8.1.2にアップグレードした時の結果です。赤枠にて、バージョンアップに必要な適用順序が判ります。

例 v8.1.2 にあげるには、v8.0.0 を先に適用する必要があります。

SteelHead Interceptor × -	+					~ -		ı ×
$\leftrightarrow$ $\rightarrow$ C $\bullet$ support.riverbed.com	n/content/support/software/acceleration/stee	lhead/interceptor.html			<b>₫</b> (0,	₫ ✿		<b>±</b> :
riverbed support		MY RIVERBED SOFT	WARE & DOCUMENTA	ATION TOOLS & RES	OURCES LICENS	ES 🛗	0	GA
Acceleration	• Opgrade advisory for 7.1.0X life	erceptor Appliance Software	anage is available if offi	- KB article <u>337030</u> .				^
SteelHead	Find Software Upgrade	:						
SteelFusion	Use the upgrade tool to find recom	nmended upgrade paths betw	veen versions.					
SteelConnect	*From Version: 6.0.0	✓ *To Version:	8.1.2 🗸 S	Submit				
App Acceleration	Linear de nette frem C.O.O.t	. 0.1.2						
Control and Management	$\begin{array}{c} \text{Opgrade path from 6.0.0 t} \\ 6.0.0 \rightarrow 8.0.0 \rightarrow 8.1.2 \end{array}$	0 8.1.2:		×				
Alluvio IQ	Software Description	Models	Release	Downloads				
Digital Experience - Management	Interceptor Appliance Software Image - Includes support for FIPS mode	Models Interceptor 9600, Interceptor 9800	Jul 21, 2023	Software (207.5 MB) Checksum *Alert*				1
Network Performance   Management	Interceptor Appliance Software Image - Includes support for	Models Interceptor 9600, Interceptor 9800	Sep 29, 2021	Software (204.5 MB) Checksum				
Legacy -	FIPS mode Version 8.0.0 (64-bit)			*Alert*				- 1
Product List (A-Z)								- 1
E Submit a Case	Software Documentation						(	
🖂 Email Support	Display Version: 8.1.2	~					(	
📎 Phone Support	Software Description	Models	Releas	e Downloads				
							(	
	SNMP MIBs							dbac
	You can access the Interceptor MIB accessible through the Management	directly from the appliance. Console.	The MIB is available fro	om the Help page				Fee
	Did you find this useful?							

#### ⑥ 製品種別やバージョン、製品型番に誤りないか確認し、「Software」をクリックします。

Interceptor Appliance Software	Models Interceptor 9600,	Sep 29, 2021 Software (204.5 MB)
Image - Includes support for	Interceptor 9800	Checksum
FIPS mode		*Alert*
Version 8.0.0 (64-bit)		

⑦ 「Download」をクリックし、ファイルを任意の場所に保存します。
 ※必要なバージョンをすべてダウンロードします。



- ⑧ Interceptor の管理画面にログインします。
   アクセス先 HTTP://SteelHeadのIPアドレス
   ユーザ名: お客様管理
   パスワード: お客様管理
- ⑨ ADMINISTRATION> Software Upgrade をクリックします。
- ⑩ 画面内の Form Local File に先程ダウンロードしたファイルをアップロードし、「Install」をクリックします。
- ⑪ 画面上部にメッセージが表示されるので、「Reboot the appliance」をクリックします。
- 迎 「Reboot」をクリックし、再起します。
- ③ 目的のバージョンになるまで、手順[9-12]を繰り返します。
- ⑭ ADMINISTRATION> Software Upgrade を選択し Booted Version が更新されていることを確認します

#### 4 ハードウェア・ソフトウェア サポート終了ポリシー

- *Riverbed* 社製品のハードウェアおよびソフトウェアのサポートポリシーは、以下 URL より確認頂けます。 <u>https://support.riverbed.com/content/support/about\_support/end\_of\_life\_policy.html</u>
- ハードウェアおよびソフトウェアのサポート終了製品一覧 <u>https://support.riverbed.com/content/support/eos\_eoa.html</u>